

SETUP INSTRUCTIONS - Smart Frame Fabric System

1



Individual frame components

2



Lay frame out before locking together

3



Use allen key to lock frame

4



Finished frame

5




Push silicon edge of fabric panel into

6



Continue to insert edging around the groove

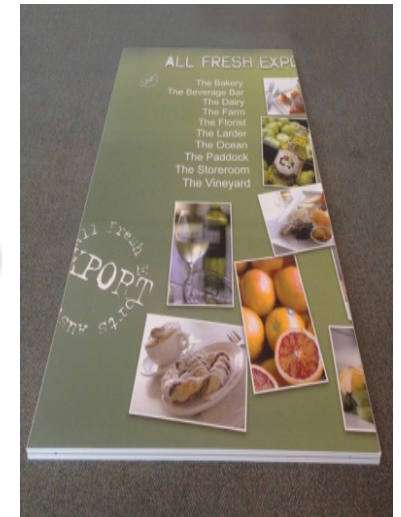

Finished frame with fabric attached frame

SETUP INSTRUCTIONS - Smart Frame Fabric System

7



Attach base plate to post

8



Attach frame to posts